



INSTALLATION

L.E.D. ARMREST ACCENT for '01-'05 GL 1800 3242

PARTS INCLUDED

- 1 Left Passenger Armrest Accent
- 1 Right Passenger Armrest Accent
- 1 Run-Turn "Y" Harness for Armrest Accents
- 1 Rear Lighting Adapter
- 1 Hardware Kit Containing:
 - 4 6" Black Nylon Cable Ties
 - 1 Dielectric Grease Pack
 - 4 #8 x 1/2" Self-Tapping Screws
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND NOTICES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING

THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

NOTICE

This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality or damage the product itself or the product to which it is being attached.

TOOLS SUGGESTED

Drill and Drill Bit Set, Center Punch, Set of Metric Hex Wrenches, Phillips screwdriver

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

NOTICE

If installing this product for another party, please make sure they receive this copy of the installation instructions so they are aware of the important information contained in them.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition.

NOTICE

Fits '01-'05 GL1800 models only.

NOTICE

A factory service manual may be helpful in performing this installation. Do not attempt to perform this installation if you are not confident in your ability to complete all of the steps in the procedure; consult a trained technician.

STEP 2

Remove the seat (2 hex bolts in each seat grab handle), passenger backrest (2 screws in underside of trunk lid) and rear fender panel (4 bolts in the corners and one behind the license plate). PIC 1

STEP 3

Determine the left Armrest Accent (sitting on bike) from the right. PIC 2

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Kuryakyn warrants that any Kuryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Kuryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Kuryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Kuryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Kuryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Kuryakyn and a customer.
- Kuryakyn products are often intended for use in specific applications. Kuryakyn makes no warranty if a Kuryakyn product is used in applications other than intended.
- Kuryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Kuryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to; control modules, wiring, chrome & other components.
- Kuryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Kuryakyn. Kuryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Kuryakyn® products, you can receive a complete catalog free of charge.

Send the Proof-of-Purchase below with your address to: Kuryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Kuryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Kuryakyn USA® All Rights reserved.



kuryakyn.com

STEP 4

Test fit the left Armrest Accent to the rear of the left passenger armrest. PIC 3 The Accent should follow the contour of the trunk and line up with the top of the passenger armrest.

STEP 5




Using two of the included #8 X 1/2" self-tapping screws (Red arrows in PIC 3 and 4), attach the Accent to the armrest. Start the outer screw first then gently push down on the inner side of the accent and start the second screw. (Ensure the wire harness is routed through the notch as shown in PIC 4). Tighten both screws.

STEP 6

Repeat Steps 3 through 5 for the right side.

NOTICE

Secure all wiring from the newly installed and/or from existing parts, away from any moving parts, pinch points or extreme heat. Küryakyn WILL NOT issue a warranty on any electrical component that fails due to pinched, crimped, broken, abraded, melted or frayed wires.

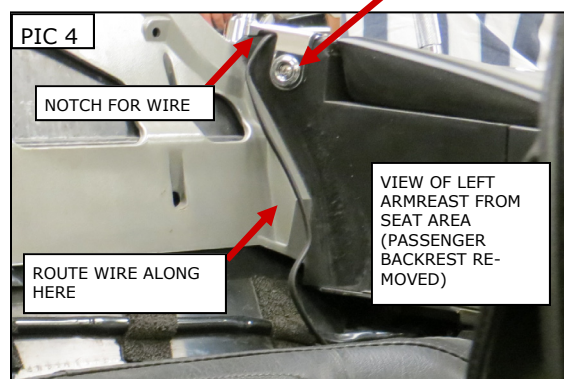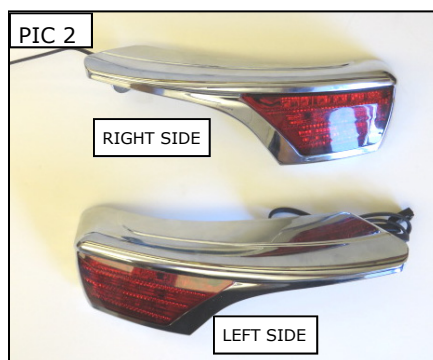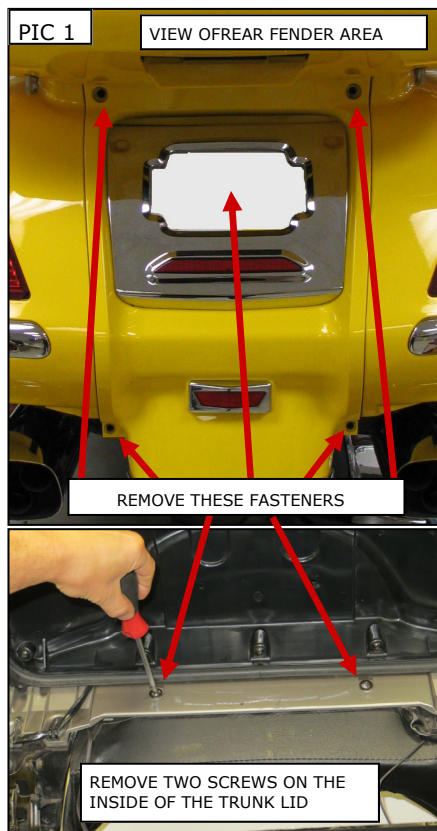

STEP 7

Open the trunk. Route the wire harnesses from each Accent along the OEM harness on each side of the trunk to the center of the under seat area. PIC 5, 6 and 7 Use the OEM wire harness retainers and the included nylon cable ties to secure the wires out of harms way.

NOTICE

Ensure that the wire harnesses from the Accents DO NOT get pinched in the trunk lid hinges.

STEP 8

Locate the included Run-Turn "Y" harness. Connect the 3-pin connector marked **TO LH LIGHT** to the Accent attached to the left (sitting on bike) armrest. Connect the 3-pin connector marked **TO RH LIGHT** to the Accent on the right armrest.

WIRE HARNESS ROUTING

STEP 9

From the rear fender area, looking along the frame rails, visually check for "daylight" on the under-seat side of the trunk to determine the best routing location. Using a piece of wire (e.g. straightened coat hanger), route it from the rear of the motorcycle along the inside of either the left or right frame rail until it protrudes from somewhere in the areas circled in orange in PIC 7.

-cont.-

STEP 10

Secure the 6 pin connector (from the "Y" harness) to the protruding end of the wire with electrical tape. From the rear of the bike, gently pull the wire back out in order to route the 6-pin plug side of the "Y" harness to the rear fender area. Once the 6-pin plug has been pulled out far enough it can be removed from the wire. Use the included cable ties to secure the "Y" harness out of harms way.

NOTICE

Küryakyn recommends the use of dielectric grease on electrical connections.

NOTICE

Locate the Red and Blue plugs (shown in PIC 8) in the rear fender area. If you already have Küryakyn Rear Accessory lights or a Küryakyn Plug and Play Trailer Harness installed, connect the included Rear Lighting Adapter in-line to the existing harness(es). PIC 9

STEP 11

Locate the red 3 pin connectors in the rear fender area. PIC 8 Locate the white 3-pin connectors with orange wires (**A** in PIC 10) on the supplied Rear Lighting Adapter. Disconnect the red 3-pin connectors and connect the white 3-pin connectors in-line.

STEP 12

Locate the blue 3 pin connectors in the rear fender area. PIC 8 Locate the white 3-pin connectors with blue wires (**B** in PIC 10) on the supplied Rear Lighting Adapter. Disconnect the blue 3-pin connectors and connect the white 3-pin connectors in-line.

STEP 13

Locate the blue 2-pin connectors in the rear fender area. PIC 8 Locate the white 2-pin connectors with black and white wires (**C** in PIC 10) on the supplied Rear Lighting Adapter. Disconnect the blue 2-pin connectors and connect the white 2-pin connectors in-line.

STEP 14

Connect the remaining white 6-pin connector (**D** in PIC 10) from the Rear Lighting Adapter to the white 6-pin connector on the "Y" harness (from Step 10).

STEP 15

Turn the bike on and ensure that all of the lights function properly. If not, recheck the connections made in Steps 8 and 11-13.

WARNING

ENSURE PROPER LIGHT OPERATION BEFORE RIDING THE MOTORCYCLE. VISIBILITY IS A MAJOR CONCERN FOR MOTORCYCLISTS. A LIGHT MALFUNCTION COULD RESULT IN DEATH OR SERIOUS INJURY.

STEP 16

Replace the seat, passenger backrest and rear fender panel.

WARNING

AFTER INSTALLING THE SEAT, PULL UP ON IT TO ENSURE IT IS LOCKED INTO PLACE. A LOOSE SEAT CAN SHIFT AND CAUSE LOSS OF CONTROL RESULTING IN SERIOUS INJURY OR DEATH.

NOTICE

It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not provide warranty coverage on products or components lost due to improper installation or lack of maintenance. Periodic inspection and maintenance are required on all fasteners.

